 
 





Cat. No. 63-962
OWNER'S MANUAL

Please read before using this equipment.

0.9 Inch LED Alarm Clock



   
RadioShack®

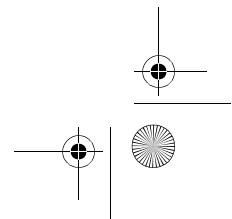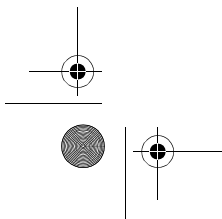

FEATURES

Your RadioShack 0.9-Inch LED Alarm Clock is ideal for your bedroom or any other location where you desire an easy-to-read time display and full-featured alarm operation.

Its features include:

Large Display — numbers almost a full inch tall make the time easy to read.

Super Loud and Normal Alarms — let you choose the alarm volume to suit your needs.

12-Hour Format with PM indicator — lets you quickly note the correct time.

Power Failure Alert — turns off the clock's display when AC power is interrupted, to conserve backup battery power.

Battery Backup — operates all of the clock's features (except the display) during a power failure.

Battery Sentinel[®] Indicator — lights when the backup battery is weak or missing.

Snooze — lets you temporarily silence the alarm for about nine minutes.

© 1999 Tandy Corporation.
All Rights Reserved.
Battery Sentinel and RadioShack are
registered trademarks used by Tandy Corporation.

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.



CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

PREPARATION

CONNECTING POWER

To operate the clock, plug the power cord into a standard AC outlet. The display flashes **12:00** until you set the time (see “Setting the Time” on Page 6).

 
INSTALLING A BACKUP BATTERY

If AC power fails, your clock uses an internal 9-volt backup battery (not supplied) for power. For the best performance and longest life, we recommend a RadioShack alkaline battery.

Warning: Always dispose of an old battery promptly and properly. Do not bury or burn it.

Caution: Use only fresh batteries of the required size and recommended type.


Follow these steps to install the battery.

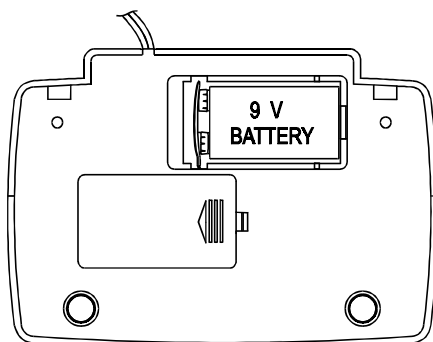

1. Slide the battery compartment cover in the direction of the arrow and lift off the cover

2. Snap the battery into the terminals and place it inside the compartment. Observe the polarity symbols (+ and -) marked inside the compartment and on the terminals.
3. Replace the cover.

 When **BATTERY SENTINEL** lights, or the display flashes after AC power is restored, replace the battery.

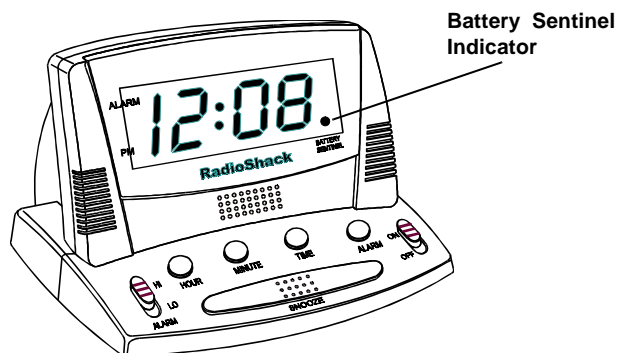


Caution: Always remove an old or weak battery. Batteries can leak chemicals that can destroy electronic parts.

Note: The backup battery operates the clock and alarm for up to eight hours. To conserve battery power the display does not light when AC power fails. If the backup battery has enough power when the AC power is restored, the clock's time will still be accurate.

OPERATION

SETTING THE TIME

 1. To set the hour, hold down **TIME** and repeatedly press (or hold down) **HOUR** until the desired hour appears.

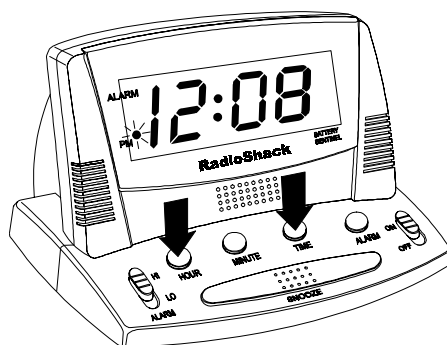


Note: An indicator lights next to PM to indicate a PM hour.

2. To set the minute, hold down **TIME** and repeatedly press (or hold down) **MINUTE** until the desired minute appears.
3. Release **TIME** to store the settings.

SETTING THE ALARM TIME

 1. To set the alarm hour, hold down **ALARM** and repeatedly press (or hold down) **HOURL** until the desired hour appears.

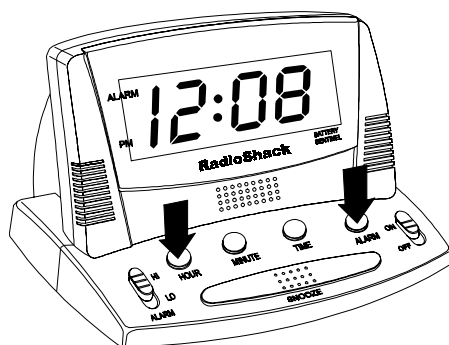


2. To set the alarm minute, hold down **ALARM** and repeatedly press (or hold down) **MINUTE** until the desired minute appears.
3. Release **ALARM**. The clock displays the current time.
4. Set **ALARM HIGH/LOW** to **HIGH** for a loud alarm or to **LOW** for a softer alarm sound.

Notes:

- To set the alarm to 12:00 AM (for an easy starting point), press **ALARM**, **HOURL**, and **MINUTE** simultaneously.
- Press **ALARM** at any time to view the alarm setting.

USING THE ALARM

 To set the alarm to sound, slide **ALARM ON/OFF** to **ON**. The ALARM indicator lights. When the clock reaches the set alarm time, the alarm sounds.

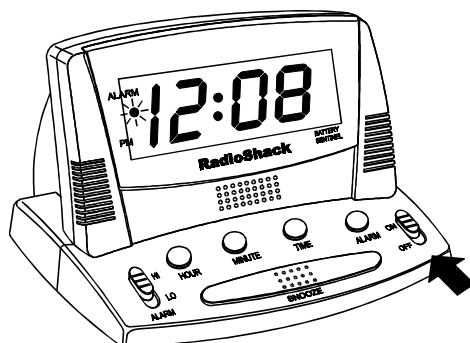


To turn off the alarm so it stops sounding. Slide **ALARM ON/OFF** to **OFF**. To have the alarm sound again the next day at the same time, slide **ALARM ON/OFF** to **ON**.

Note: If you do not turn off the alarm, it sounds for about two hours, then automatically sets to sound at the same time the next day.

USING SNOOZE

 To temporarily turn off the alarm, press **SNOOZE**. The alarm stops and sounds again in about nine minutes. Each time you press **SNOOZE**, the alarm turns off for another nine minutes then sounds again. To turn off the alarm at any time, slide **ALARM ON/OFF** to **OFF**.

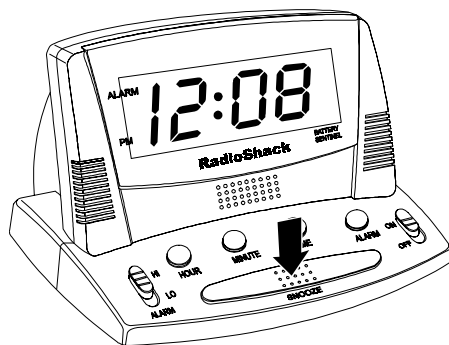

CARE AND MAINTENANCE

Your RadioShack 0.9 Inch LED Alarm Clock is an example of superior design and craftsmanship. The following suggestions will help you care for your alarm clock so you can enjoy it for years.



Keep the alarm clock dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.



Use and store the alarm clock only in normal temperature environments. Temperature extremes can shorten the life of electronic devices and distort or melt plastic parts.



Keep the alarm clock away from dust and dirt, which can cause premature wear of parts.



Handle the alarm clock gently and carefully. Dropping it can damage circuit boards and cases and can cause the alarm clock to work improperly.

 


Use only a fresh battery of the required size and recommended type. Batteries can leak chemicals that damage your alarm clock's electronic parts.



Wipe the alarm clock with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the alarm clock.





Modifying or tampering with the alarm clock's internal components can cause a malfunction and might invalidate its warranty. If your alarm clock is not performing as it should, take it to your local RadioShack store for assistance.



SPECIFICATIONS

Power Requirements	AC 120V, 60Hz, 5 W
Battery Sentinel	One 9V Battery
Battery Backup Standby	15 μ A 9V DC
Dimensions (HWD)	4 \times 5 ^{7/10} \times 3 ^{7/8} Inches (102 \times 145 \times 98 mm)
Weight	11 oz (300 g)

    Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.



Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street., 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

05A99

Printed in China